 

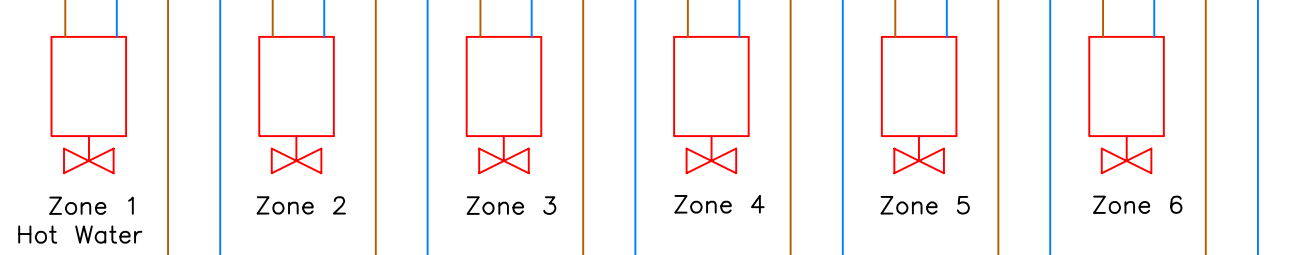
 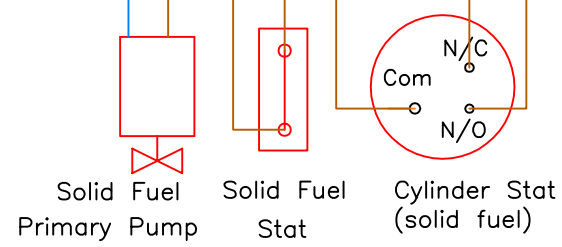

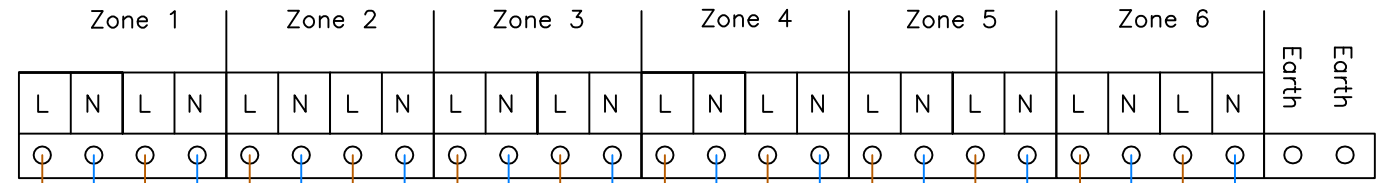
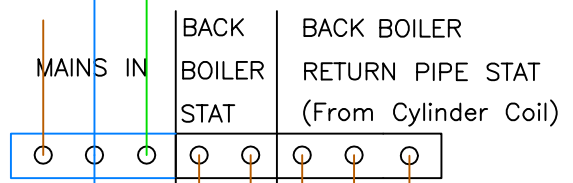


BOILER & SOLID FUEL COMBO BOARD
MULTIZONE 12/08 V2.0

SW1:
OFF: MULTIZONE COMMAND ONLY
ON: MULTIZONE & SOLID FUEL COMMAND

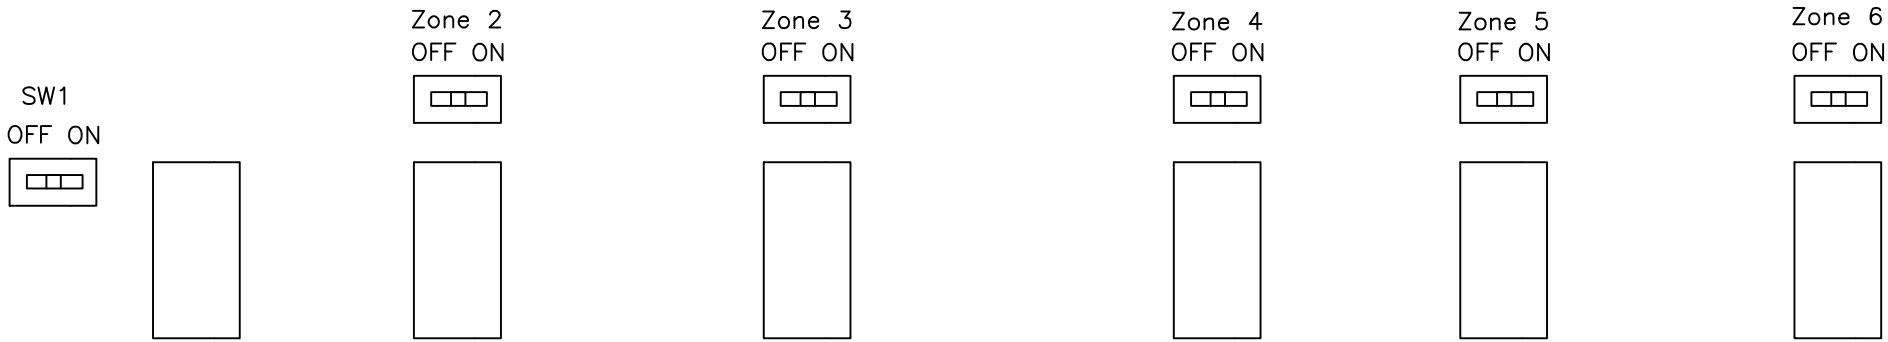

From Multi-Zone Zone outputs